

# VERSA PHIL FLOAT VALVE

## Installation Instructions



1. Apply PTFE tape or approved sealant to the thread ensuring sufficient is applied to ensure a watertight seal



2. Screw into the female thread by hand until firm.



3. Take care when holding the body that excessive pressure is not applied or the body may be damaged.



4. Where necessary bend the lever to adjust the water level. This can be done by removing the circlip, sliding out the pivot pin and removing the lever.



5. Using a pair of multi-grips or equivalent the lever can then be bent to the necessary angle.



6. Slide the pivot pin back into place.



7. Replace the circlip and secure the lever.



**Note - A 3/4" adaptor is included and can be screwed onto the rear of the body.**